


activaBand

1.

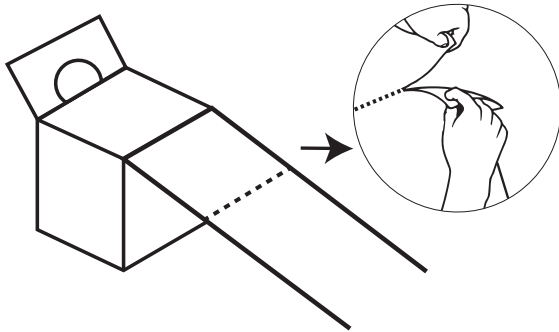


Pull **activaBand** from box and tear off on perforation.

2.



Expand **activaBand**

3.

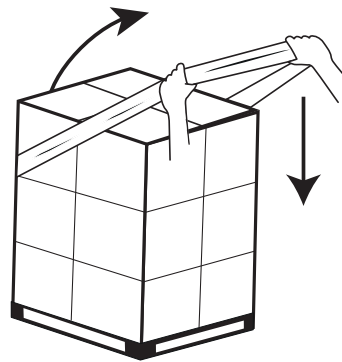

Pull **activaBand** over pallet.

STRETCHBAND